



Top Side  
Oberseite

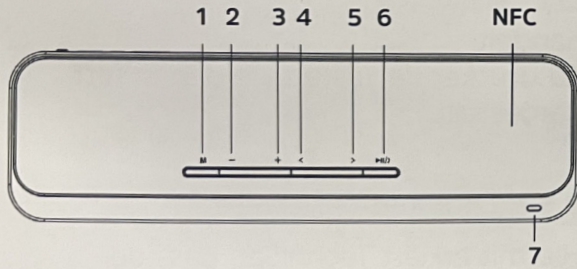

Back  
Rückseite

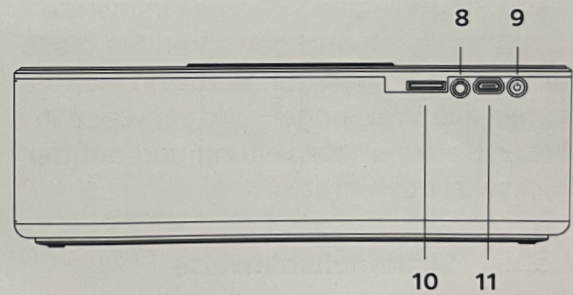

- 1, Mode
- 2. Volume +
- 3. Volume -
- 4. Previous Track
- 5. Next Track
- 6. Play / Pause - Answer Call
- 7. Power LED
- 8. Aux in - 3mm Jack
- 9. Power on / off
- 10. Mini SD slot
- 11. DC- In - Mini USB

LED's

- LED lights up blue: Bluetooth mode.
- LED lights up green: AUX mode.
- LED flashes green: SD card mode.
- Other colors of the LED:
- LED lights up red: Battery is being charged.
- LED flashes red: low battery level
- LED flashes blue: Bluetooth pairing.

Charging

**6.4 Charging the battery**  
The speaker contains a 2000mAh lithium battery. To charge the battery, connect the supplied micro USB cable to the micro USB charging socket (11). Connect the USB cable to a USB power source or a USB power adapter. The red LED signals the charging status. The battery is 100% charged when the three LEDs go out.

**i** The USB power source should be able to deliver a voltage of 5V DC and a current of 0.8A to 1A

**7 Operation**

**7.1 Switching the device on and off**

Press the key  
Power ON/OFF 42 3 s. to turn the device on themes. You will hear a confirmation

The operating LED (7) flashes blue to indicate that it is searching for Bluetooth devices in your area (connection mode).

**i** The blue LED lights up continuously if a bluetooth connection consists.

**i** The blue LED goes out if no Bluetooth connection is established within 5 minutes.

**Operation**

To switch off, press and hold the Power ON/OFF button (9) for about 2 seconds. A confirmation tone sounds. All LEDs then go out.

**7.2 Change the operating mode**

You switch from Bluetooth mode to AUX mode or SD card mode of the BLUSPEAKER MINI 2 by pressing the M button (1).

**i** The sources must be occupied for the Alternate operating mode to work. So one device must be connected via Bluetooth, another via the AUX-IN and an SD card must be inserted.

**i** The operating mode can be recognized by the color of the LED:

SET UP PAIRING

**7.4 Pairing Bluetooth devices**

Before you can use the BLUSPEAKER MINI 2 with another Bluetooth device for the first time, the two devices must be connected (paired).

Since the procedure varies from device to device can differ, here is the basic procedure described.

**i** Once successfully connected, both devices "remember" each other, eliminating the need to repeat the connection process each time.

SET UP PAIRING

To connect to a Bluetooth device, follow these steps:

**i** To minimize connection errors, place desired devices within 1 meter of each other.

- > Switch on the BLUSPEAKER MINI 2. The operation LED now flashes blue.
- > If necessary, activate the Bluetooth function on your Bluetooth device and start the search for available devices.
- > Then select "BluSpeaker Mini 2" from the list of available devices.
- > If you are prompted to enter a PIN, use the PIN: "0000".

To change the volume, press and hold the Volume buttons (2, 3) on the device until the desired volume is reached.

- + increases the volume
- reduces it

You can also continue to use the volume control of the playback device used. However, make sure not to turn the volume on the external source too low, otherwise interference noise may occur.